

DELL® 3000CN

TONER CARTRIDGE REMANUFACTURING INSTRUCTIONS



DELL 3000CN TONER CARTRIDGE

REMANUFACTURING THE DELL 3000CN TONER CARTRIDGE

By Javier Gonzalez and the Technical Staff at UniNet



1. Disassemble the toner cartridge, starting from the lock position.



2. Use a small flat head screwdriver to lift the tab over the stopper to allow you to turn the blue end cap counter-clockwise.


NOTE: The color of the end cap will vary, depending on the color of the toner inside the cartridge.



3. This is the starting point.



4. Turn the cap until the tab comes to a complete stop and has entered under the blue cap.

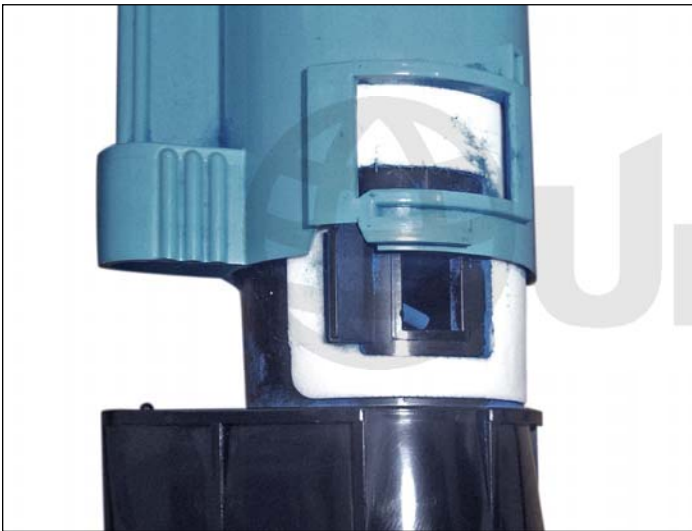

5. Now slide the cap out away from the cartridge.




6. Remove the carrier fill plug as shown.



7. Shown is the waste carrier chamber. Empty it out and you will find the toner fill plug inside. Remove the plug and clean out the cartridge for refilling.

NOTE: You will need to mix toner and carrier in the same toner bottle before refilling the toner hopper.

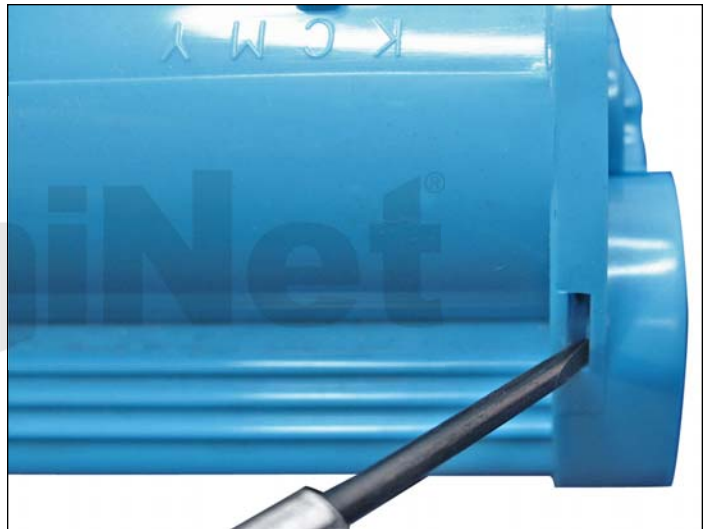

REPLACING THE OEM CHIP

8. Using a small flat head screwdriver, unlock the chip by pressing on the release tab in the slot shown.



9. Make sure the replacement chip tabs enter the slots during insertion so that they lock in place.



10. Replacement chip installed.

TROUBLESHOOTING DEFECTS DUE TO CARTRIDGE REMANUFACTURING

Problem:

Printer is not reading/not recognizing the cartridge.

Details:

The machine reads the amount of waste carrier-toner located on the waste hopper bin. If the waste hopper bin compartment is full, the machine might read that the toner cartridge is empty and thus, showing a “toner low” message. After refilling, follow these simple steps to continue printing:

Suggestion:

1. Turn OFF the printer for 3 to 5 minutes, and turn it back ON again.
2. Once the printer is ON, remove the cartridge from the printer, shake and install it again.
3. If steps 1 and 2 did not work, remove the cartridge and empty any carrier-toner left on the waste hopper bin.