

OKIDATA® C3400

EASY TO REMANUFACTURE CARTRIDGE INSTRUCTIONS



OKIDATA C3400 TONER CARTRIDGE

REMANUFACTURING THE OKIDATA C3400 TONER CARTRIDGE

By Mike Josiah and the Technical Staff at UniNet




The Okidata C3400/3530 toner cartridges are rated for 2,500 pages black and 2,000 pages color at 5%. The OEM part number is 43459304 Black, 43459303 Cyan, 43459302 Magenta, and 43459301 Yellow. There are also a 1,500 page black and 1,000 page color cartridges: OEM 43459404 Black, 43459403 Cyan, 43459402 Magenta and 43459401 Yellow. There is a chip on these cartridges that must be replaced each cycle.




1. Press in on the tabs in the center section as shown.




2. Separate the two halves.

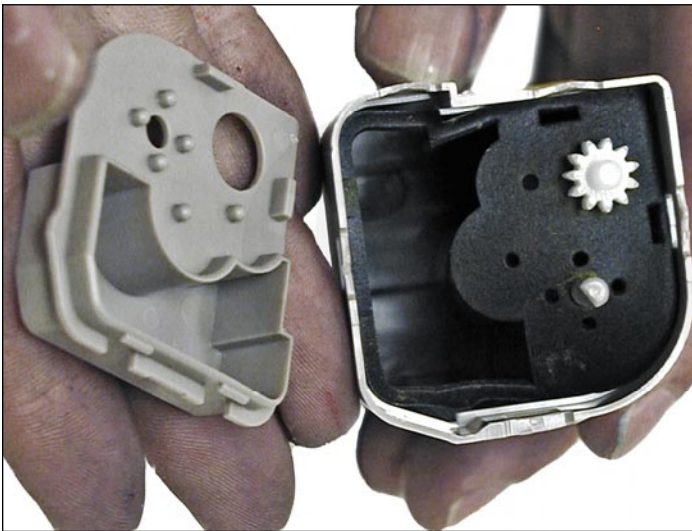

3. Remove the shield from the waste chamber.

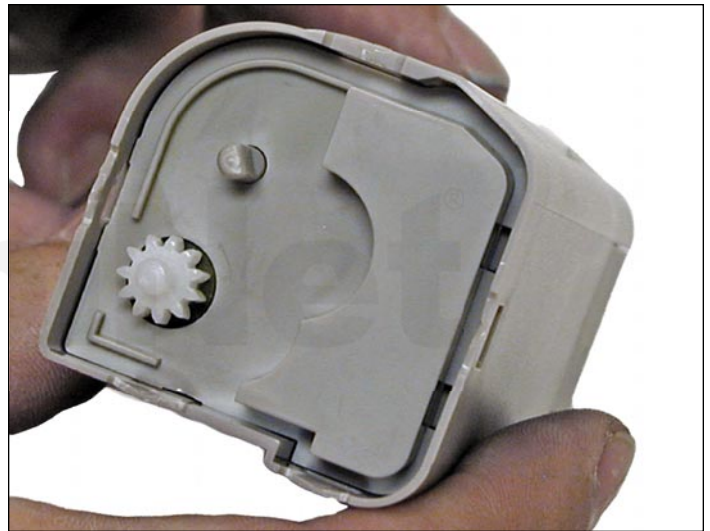


4. Clean out all the old toner and replace the shield.

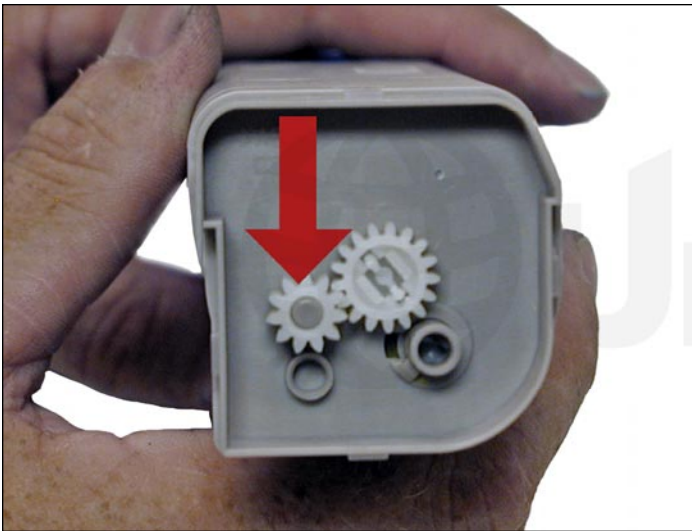


5. On the supply section, remove the small gear.

UniNet®

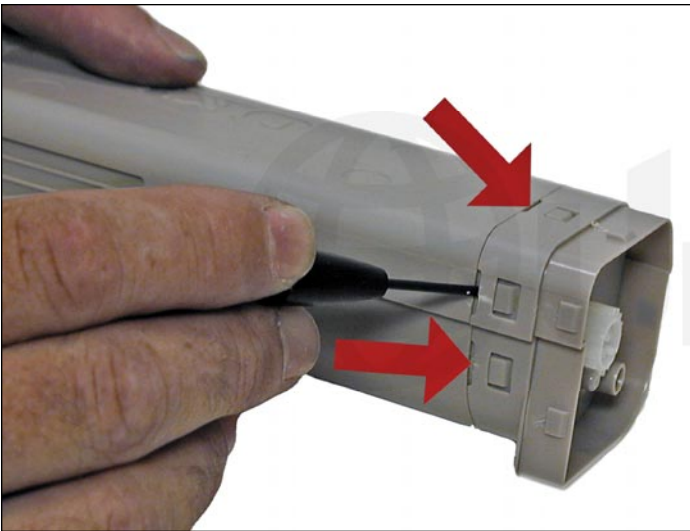

6. Remove the center section by pressing in on the tabs.

Clean out any remaining toner.

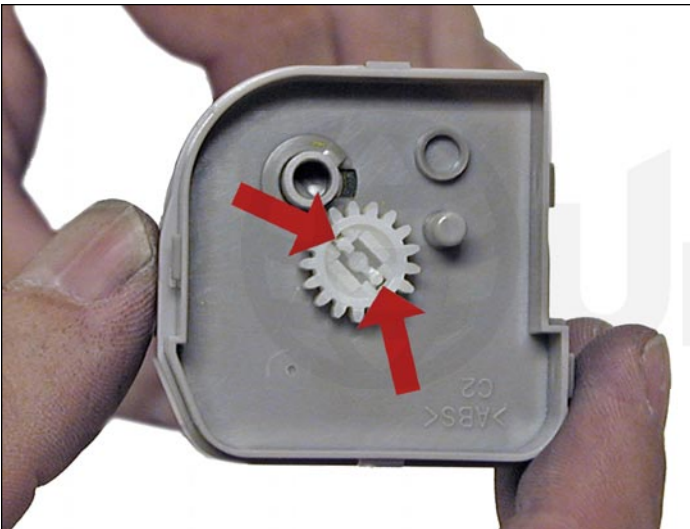

7. Squeeze the locking teeth on the drive gear.

Remove the gear.



8. Hold the mixing auger centered and insert into the center section.



9. Add the new toner to the hopper.



10. Replace the center section into the supply section and snap the drive gear in place. Replace the smaller gear.



11. Snap on the waste chamber.



12. Slide the chip cover off the cartridge and replace the chip.